

# Full-Size Tripod and Paint Box Installation Instructions

## Product Details



## Product Information

(Number of sections: 3)  
 (The product has a load-bearing capacity of 5 kg.)  
 (Product Net Weight: ≈1.4kg)



## Instructions for use



**01** (Stretch Demonstration Diagram)  
 Flip open the latches and extend the tripod.



**02** (Method for Installing the Pigment Cartridge)  
 As indicated by the arrows in the figure, while moving the locking lever toward the "FREE" position, tilt the quick-release plate to detach it.




**03** (Tighten the paint box.)  
 Align the screw of the detached quick-release plate with the screw hole on the pigment box, then rotate to tighten it securely, firmly fastening the pigment box to the quick-release plate.



**04** (Method for Installing the Pigment Cartridge)  
 As indicated by the arrows in the figure, while moving the locking lever toward the "FREE" position, tilt the quick-release plate — with the pigment cartridge attached — and remount it onto the tripod head.

## 05 (Stretch Demonstration Diagram)

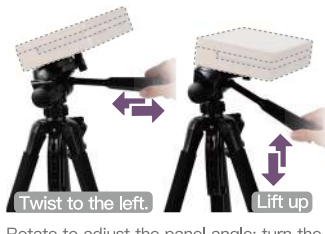

Rotate to adjust the panel angle: turn the handle to the left to tilt the gimbal downward or upward; turn the handle to the right to lock the gimbal's direction.



Rotate the side-tilt lock to the left to flip the head plate upward by 90°; rotate the side-tilt lock to the right to secure the head plate at the desired tilt angle.



Rotate the main locking knob counter-clockwise to unlock the pan angle of the gimbal; rotate the main locking knob clockwise to lock the gimbal angle.



**06** (Bottom Bracket Usage Instructions)  
 Rotate the handle to adjust the vertical angle, extending it upward or retracting it downward. Turn the center column locking knob to the right to loosen the center column, or to the left to clamp it in place, preventing it from sliding



**07** (How to Use the Stand)  
 Flip open the latches and extend the tripod. While extending the legs, extend the leg tubes along the leg tubes at the lowest point of the leg tubes. If the braces are left in a partially extended state midway along the tubes, the tripod will lack stability. To ensure maximum stability, always extend the leg tubes as fully as possible during use.  
 While retracting the feet, retract the support arms upward over the guide tube. Release the leg locks to collapse the tripod.

This is not intended for use by children. Do not use for other than the intended purpose. Thank you sincerely for your trust in our product! If you have any questions or uncertainties during use, our team is happy to assist you at any time.